

**TRUCKMATE MEANS
“ALL BUMPERS FOR ALL TRUCKS”**

America's #1 source for heavy truck bumpers
is also your source for Rear Bumpers, Custom
Bumpers, Grilles and Turbowings.



**DON'T SEE THE BUMPER YOU
NEED IN THE CATALOG?**

NO PROBLEM . . .

We will build it in the style

And with the light

And text cutouts you want.

Check out our custom build

Sheet in the back of this

Catalog and let us build you

Exactly what you want . . .

Built to order and sure to please!

GRILLES

Grilles/Surrounds/Trims

PETERBILT

all years

330

377

378

379

385

VOLVO

VNL generation 1

VNL generation 2

WIA 1986-1997

Mack

1988 - later

CH

Vision

Freightliner

60 70 80 1996-later

Cascadia 2008-later

Century 1996-2000

Century 2005-later

Classic 120 1997-later

Classic 132 1997-later

Columbia 2001-later

Coronado SD 2006-later

FLD 112 1995-later

FLD 112 SD 1998-later

M2 106 2005-later

M2 112 2004-later

International (bold)

4900 all years

9200/9400 1987-97

9200/9400 1997-later

9300 1984-later

9900I all years

Prostar all years

Kenworth

all years

T-300

T-600

T-800

W900A

W900B

W900L

Hino

238

258

268

338

GMC

2003-later


6500.7500/8500

Ford

F600 1994-2000


F650 2000-03

3012




Model T660

3013




T270, T370 Setback Axle, Also Fits T-300 2008 & Newer

3014




T-440 Setback Axle

3017




Model T300, Fits up to 2008

3018




T800 2004 & Newer w/Bolt On Tow. Also Fits T-880

3018NL




T800 2004 & Newer w/Bolt On Tow. Also Fits T-880

3019




Model T400

3023




T600 Chrome

3024




W900L Model Conv. Also Fits B Model Up to 2010

3024NL




W900L Model Conv. Also Fits B Model Up to 2010

3027




Conv. B or L Model 18" Ultramax. Also Fits B Model Up to 2010

3027WL




Conv. B or L Model 18" Ultramax. Also Fits B Model Up to 2010

30270V




Conv. B or L Model 18" Ultramax w/Oval Cutout. Also Fits B Model Up to 2010

3027RD




Conv. B or L Model 18" Ultramax w/Round Cutout. Also Fits B Model Up to 2010

3028




Conv. T-800 Setback Axle. Fits Most Models 1988 to 2003

3028NL




Conv. T-800 Setback Axle. Fits Most Models 1988 to 2003

3217

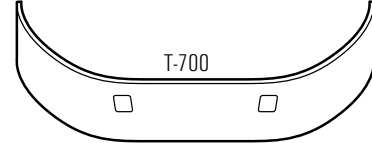


T-700

3324NL




2011 & Newer W900B

3327




2011 & Newer Conv W900B
(For 33 w/Rectangular Fog Light Holes, Order 3327WL)

30680




Conv. Model T680 Setback Axle

302825




T800 - 2004 & Newer - No Fog Holes

302825WL




T800 - 2004 & Newer

302826



T800 - 2004 & Newer - Tapered Ends


302826WL



T800 - 2004 & Newer - Tapered Ends with Fog Holes




3032




Conv. Model 379/357 18" Ultramax 378

3320




Model 320

3032WL




Conv. Model 379/357 18" Ultramax 378

3330




330 Set Forward

30320V




Conv. Model 379/357 18" Ultramax w/Oval Cutouts 378

3332



Conv. Model 389 & 388 18" Ultramax - '07 & Newer
Also Fits 367 Forward Axle & 388. Also Fits 365 & 567 Setforward Axle.

3032RD




Conv. Model 379/357 18" Ultramax w/Round Cutouts 378

3333




Conv. Model 389 & 388 - '07 & Newer
Also Fits 367 Forward Axle & 388. Also Fits 365 & 567 Setforward Axle.

3033




Conv. Model 379/357/378 Foreward Axle

3334




Conv. Model 389 & 388 - '07 & Newer
Also Fits 367 Forward Axle & 388

3034




Conv. Model 379/357/378 Foreward Axle

3335

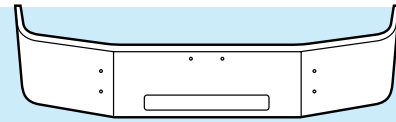


Conv. Model 335 with Brackets

3036



Conv. Model 359 COE Model 352

3337

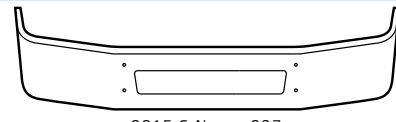


2015 & Newer 337

3037




Conv. Model 359 18" Ultramax

3348

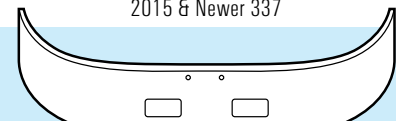


348 Setforward Axle

3038C




Conv. Model 377SBFA - Check Measurements • 1996 & Older

3367

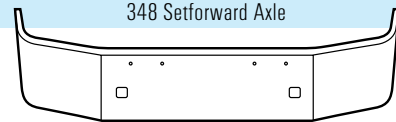


'07 & Newer 367 Setback Axle • Brackets & Diamond Plate Not Inc
Also Fits Some Model 365

3038CL




Conv. Model 377SBFA - Check Measurements • 1996 & Older

3384

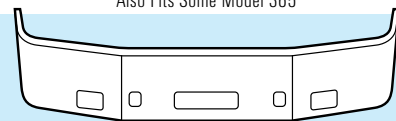


Model 384

3038FAE




Conv. Model 377SBFA Forward Axle - Check Measurements. 1997 & Newer

3385

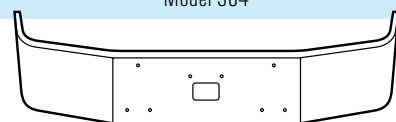


Conv. Model 385 Setback

3038CA



Model 377 Setback Axle - Check Measurements • '97 & Newer


3386

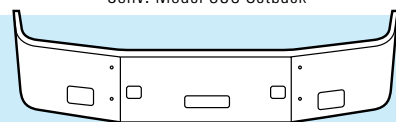

Conv. Model 386 with brackets. Fits 2008 & Newer




3387

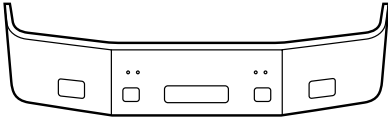


Model 387 Setback thru 2001 with brackets

3587

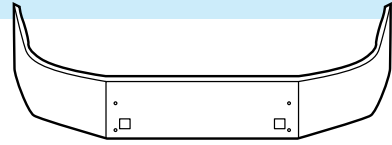


Conv. Model 587 Setback Axle

3387A




Conv. Model 387 2002 & newer with brackets

73334




365, 367, 388, 389 w/External Tow

3579

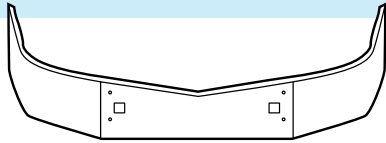

Model 579 Setback Axle


73335

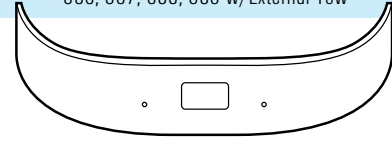

Fits Some 335 & 340




**3043
w/3043EXT**

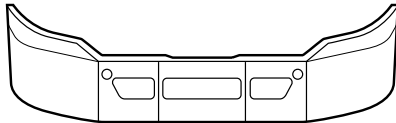


Cascadia 14" Tall with Brackets & Top Extensions. Only Replaces Plastic or Poly Bumpers

3051NS




FLD 120 SBFA Full Wrap 16" with brackets

3044




Coronado Custom Style - Does not include bumper grille

3051NSNL




FLD 120 SBFA Full Wrap 16" with brackets

3046




Fits 2003-2007 Columbia & 2005-2007 Century

3051X




FLD 120 SBFA Full Wrap 13" Tall with Brackets

3048




Century Class Up to 2004

3055




Classic 1984 & Later

3049




FL60-70-80

3055NL




Classic 1984 & Later

3049A

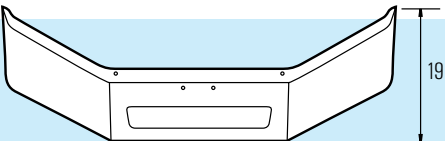


2003 & Newer - Business Class

3057




Classic 1984 & Later 18"

3051



FLD 120 SBFA Partial Wrap 12" w/13" Offset

30570V




Classic 1984 & Later 18" Classic w/Oval Cutouts

See previous page for additional Freightliner models.




3057RD




Classic 1984 & Later 18" Classic w/Round Cutout

3057WL




Classic 1984 & Later 18"

3443WL

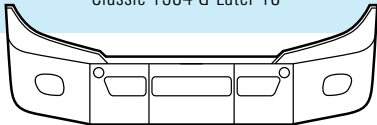


Cascadia 2008 & Newer Chrome Bumper to Replace Factory Stainless Clad Bumper. For This Bumper Without Fog Light Holes Order Part #3443

3444




2010 and Newer Coronado. Does NOT Fit SD (Severe Duty)

3445




Fits 2010 & newer Coronado SD. Only Available in 12 Inch

3446

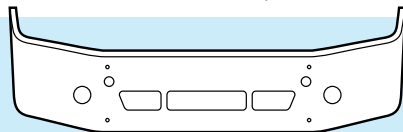


18" Tall '08 & Newer Columbia. If Replacing Alum., See #3446A

3446A

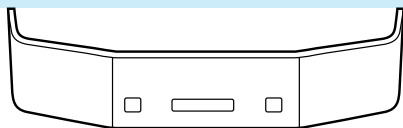


2008 & Newer Columbia. Only Replaces Aluminum Bumper

3448

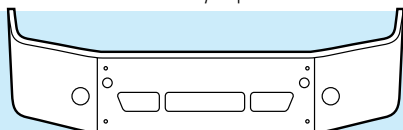


18" Tall 2008 & Newer Century Class

3449

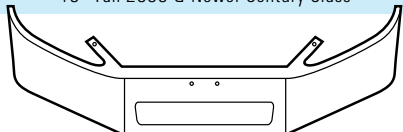


2004-2012 Business Class M2 112 (Midrange)

3449A

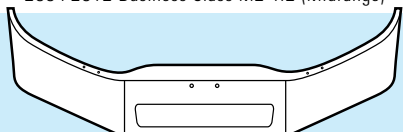


2011 & Newer Business Class M2 106 (Midrange) (Brackets Included)

3451




2012 & Newer 114 SD (Severe Duty)

3555




Conv. Model XL-6 Bolt - New Style - 04 & Newer Classic, Day Cab

3555NL




Conv. Model XL-6 Bolt - New Style - 04 & Newer Classic, Day Cab

3557




Conv. XL New Style 6 Bolt 18" Day Cab Classic 2004-2007

3557WL




Conv. XL New Style 6 Bolt 18" Day Cab Classic 2004-2007

3558




Conv. Model XL 2008 & Newer Classic

3558NL




Conv. Model XL 2008 & Newer Classic

3758




Conv. Model XL 2008 & Newer 18" Classic

3758WL




Conv. Model XL 2008 & Newer 18" Classic

3755




Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

3755NL




Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

3757



Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab

3757WL



Conv. Model XL-6 Bolt - New Style - 2004-2007 Sleeper Cab


INTERNATIONAL NAVISTAR

3081




4200-4300 - 2002 and Newer. Fits Some 8600

3092



Conv. Model 9370 18" Ultramax

3082



9900 I & IX 2000 & Newer Factory Style.
For 3082 bumper without fog light holes order #3082NL

3092WL




Conv. Model 9370 18" Ultramax

3083




9900 I & IX 2000 & Newer Ultramax.
For 3083 bumper without fog light holes order #3083NL

30920V




Conv. Model 9370 18" Ultramax w/Oval Cutouts

3086




46-47-4900 & 8100 Series (Also Available Painted Black - 3086P)

3092RD



Conv. Model 9370 18" Ultramax w/Round Cutouts


3087



Call for Measured Drawing


5000-5900 Series

3094NL




92/9400 Series Conv 1996 & Older Model

3088




S-Model 2200-2500

3096

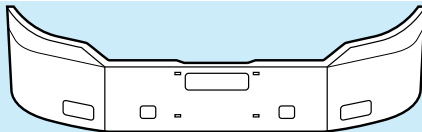


2008 to 2011 Prostar 3-Pc Bumper, brackets included. Does NOT Tilt.

3089



S-Model 1600-1900

3097




7300, 7400, 7500, 7600, 7700 Full Wrap
Set Back Axle

3090




Conv. Model 9370

3098

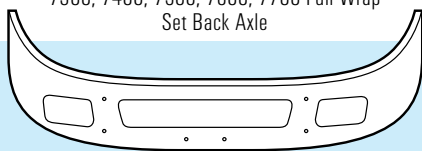


7300, 7400, 7500, 7600, 7700 Standard Wrap. Set Forward Axle.
See part #3097 for outside shape variation

3090NL



Conv. Model 9370

73088



Fits Most 2574, 2674


3091



Conv. Model 9100, 9200 & 9400 Series 97 & Newer




3116

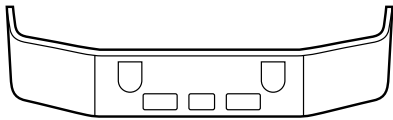


92 & Older CH Mack Setback Axle

3124




New Style R&RD Series
For bumper with round fog light holes, order #3123

3116B




93 & Newer CH Mack Setback Axle

3126




R600/R700 82-1/2 to Present

3116CHN




CHN Set Forward Axle 2004-2007

3128SP



RD688S/RD6900S Setback
Also Fits Some Granite & DM Series

3116FA




CH Mack Set Forward Axle Up to '03

3129SP




RD688 Setback - Also Fits Some Granite, CV Series,
and RS690S

3116CHUWL




2008 & Newer CHU Set Forward Axle
(Without fog light holes order #3116CHU)

3229



Newer GU/CTP 713 Mack 1 Tow. Also Fits Some Granites

3116CXUWL




2008 & Newer CXU Setback Axle
(Without Light Holes order 3116CXU)

3229SP




Newer GU/CTP 713 Mack 2 Tows

3117WL

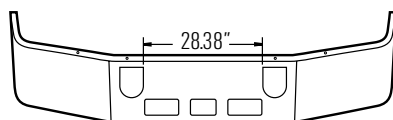


CX-Vision Up to 2005 (Without Light Holes Order #3117)

73128SP



MR MD Series

3118WL




'05 & Up CX-N and '07 & Up CX-P
(Without Light Holes Order #3118)

8080




Chrome Mack Grill
Guard. Fits R Model, Some
Granite, and Some CV Series

8081

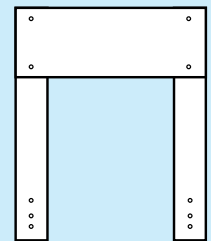


Fits Most CTP, GU, and
Some CV and Granite Models

3119



CL Series with 1 Tow Hole


31192



CL Series with 2 Tow Holes




3101




Conv. Model LN, LT, LTN, LTL, 800, 8000, 900, 9000
For Bumper with Round Fog Hole Lights Order #3100

3108




LTS & LTA Setback Aeromax

3103




F600, 700, 800 • Fits Up to '03

31650

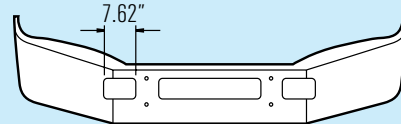

Ford F650, Check Tow Hole Size Before Ordering


3107



Conv. Model LN, LT, LTN, LTL, 800,
8000, 900, 9000 18" Ultramax


VOLVO

3062

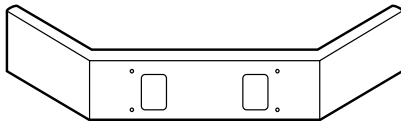


Volvo Forward Axle WG w/Bolts in Face

3062VNL




VNL Conv. 12" Tall Full Wrap w/Brackets

3062NS

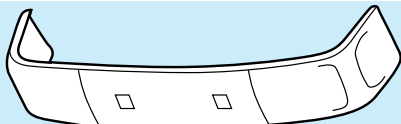

WIA & WCA Conv. Full Wrap w/Brackets

3662




Volvo VNL Generation 2, 2004 to 2011

3062VNM




VNM64T Setback Axle - 2003 & Earlier

3665




VN and VNL Series 2012 & Newer with Fog Light Brackets

**3062
VNMG2**




VNM - Most 2004 and Newer (Check Pattern)

3667

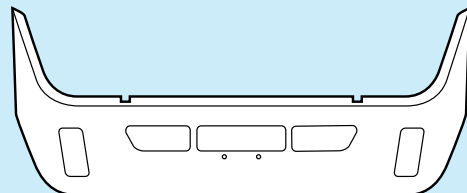


Model VT830 Set Back Axle - 18" Tall with Brackets

3062VN



VN Conv. 16" Tall Full Wrap w/Brackets

3062WG




WG Conv. Full Wrap w/Brackets - Fits most thru 2003

WESTERN STAR


Call for Measured Drawings on Setback Axle Western Star Bumpers

3064




Cornerstone 89 & Newer 18" Ultramax

3069




Cornerstone 89 & Newer

3067




'08 & Newer 4900EX

3069NL



Cornerstone 89 & Newer


3068



2008 & Newer 4900EX (For Bumper with Fog Light Holes Order #3068WL)

Call for Measured Print on All Setback Axles


HINO

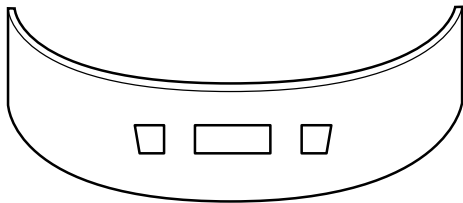

Fits Conventional models; 238, 258ALP, 258LP, 268, 268A, 338


GMC

3130

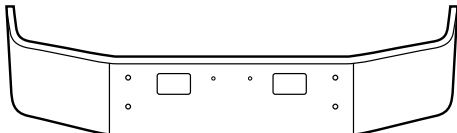


Fits Most 2004 & Newer GMC 6500, 7500

3136NS



New Style Top Kick/Kodiak (1990-2003)


3132

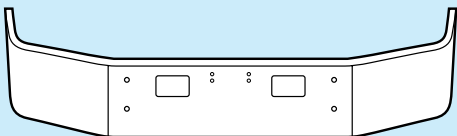

C4500-C5500 - 2004-2006


STERLING

3104




Conventional Set Forward Axle

3109

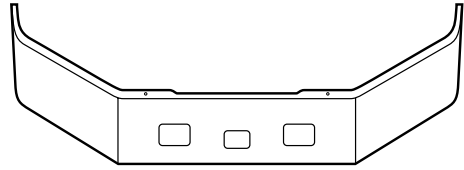


Acterra A/T Series

3106




LT-7501

39500

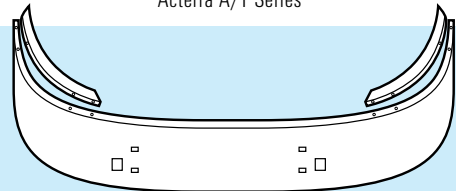

AT9500 Sterling 3-Pc Bumper


3108LT

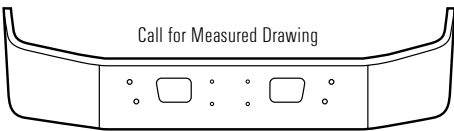


Call for Measured Drawing

LT-9500 SBFA and some LT-8500 SBFA

BLANKS



Blank, No Cutouts
3145


















Blank, No Cutouts 18" Ultramax
3147

CUSTOM BUMPERS

OUTSIDE SHAPES




SELECT FROM THESE CUSTOM OPTIONS OR CREATE YOUR OWN.




UNIVERSAL HIDDEN MOUNTING BUMPER STYLES

3147UST




20" Boxed Ends with Hidden Mounting Brackets

3147CUST




20" Boxed Ends with Deep Contour Ends & Hidden Mounting Brackets

3147USTR25



20" Boxed Ends with Hidden Mounting Brackets with Round Holes

3147CUSTR25



20" Boxed Ends with Deep Contour Ends & Hidden Mounting Brackets with Round Holes

HIDDEN MOUNTING BRACKET APPLICATION

Bumpers with hidden mounting brackets include brackets that will allow bumper to mount to:

Peterbilt - Models 379 and 359 • Kenworth - Models W900L, W900B and W900A

Freightliner - Classic XL 8-Bolt Mounts from 1982 thru 2003